




Nikon Coolpix P100 Motherboard

This guide will show you how to access the Nikon Coolpix P100 motherboard.

Written By: Rikki Brown

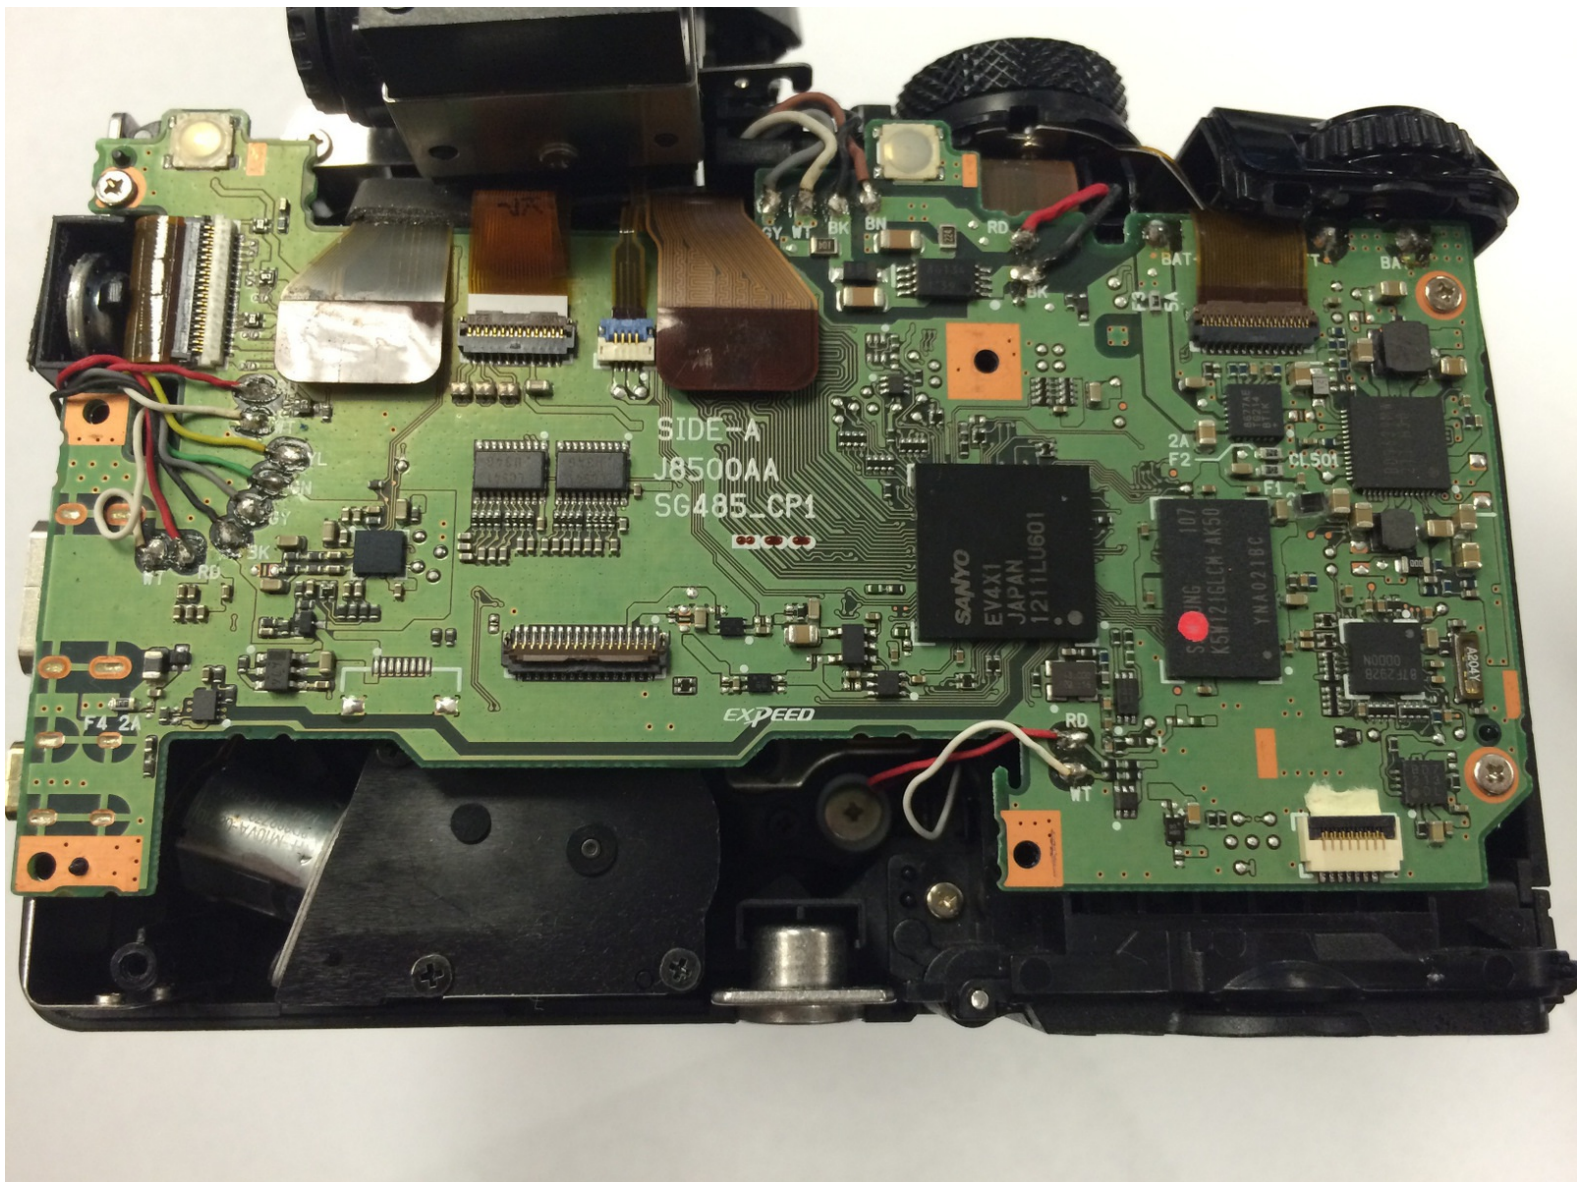



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Motherboard



- Turn the front of the camera toward you.

Step 2



- On the left side of the camera, use a Phillips #00 Precision Screwdriver to remove the two screws.

Step 3



- On the right side of the camera, remove the first visible screw.

Step 4



- Lift the HDMI and A/V OUT cover to access the hidden screw and remove.

Step 5



- Flip the camera upside down and remove the seven marked screws.

Step 6




- Remove the two screws hidden underneath the display panel.

Step 7



- Use a plastic opening tool to gently loosen up the sides of the camera.


Step 8

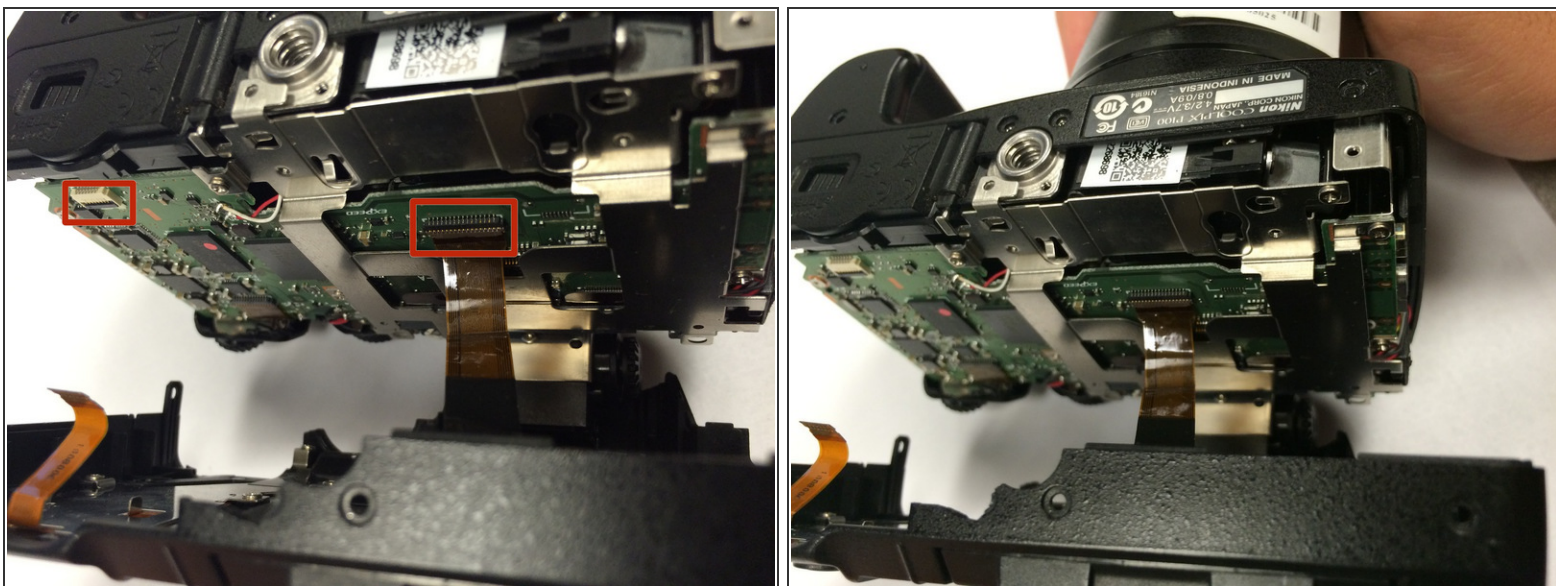

- Carefully open the camera.


⚠ There are two ribbon cables when opening the camera. Make sure to properly detach them before proceeding. [Disassembling Nikon Coolpix P100 Ribbon Cable](#)

Step 9

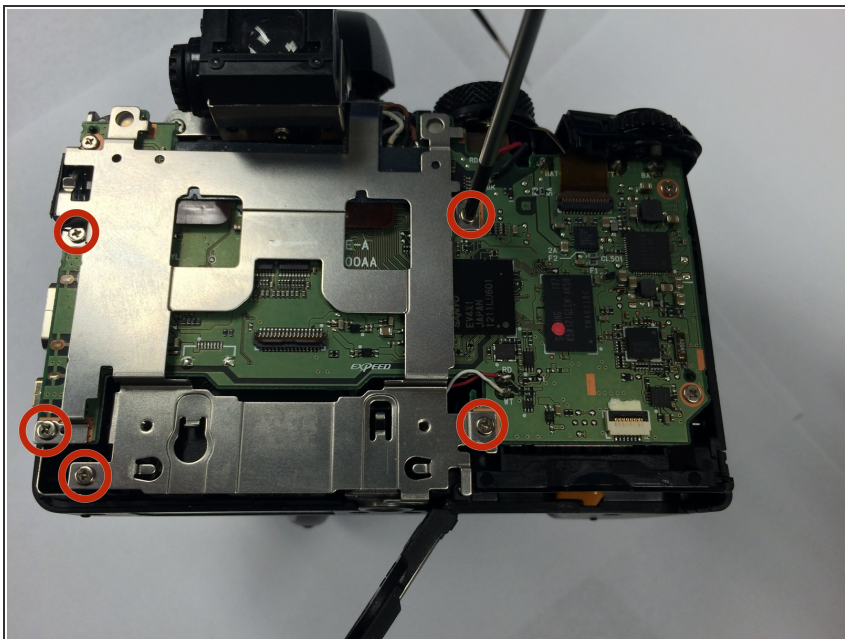


- Now you have partial access to the camera's motherboard.
- Remove the five indicated screws that are attached to the metal plate.

Step 10

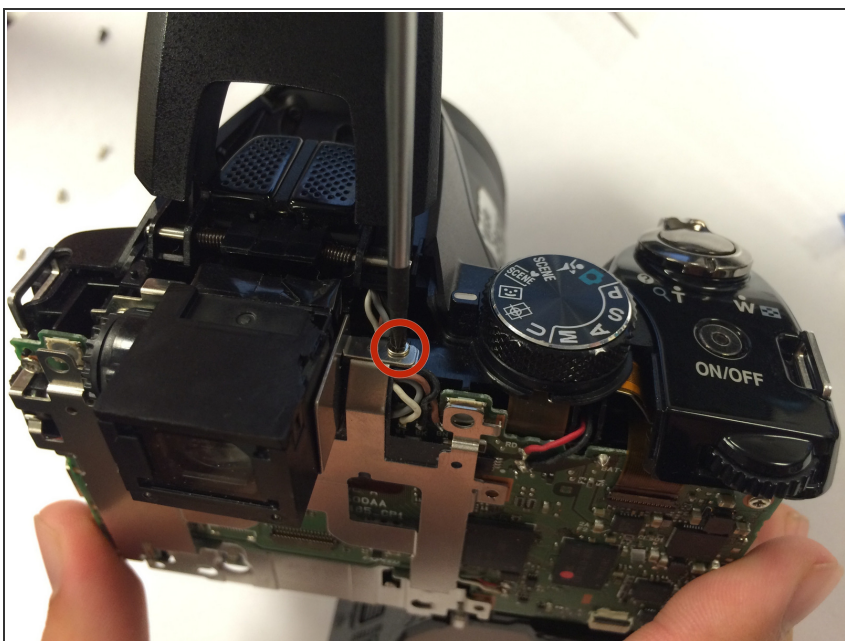


- Remove the hidden top screw that is attached to the metal plate.

Step 11

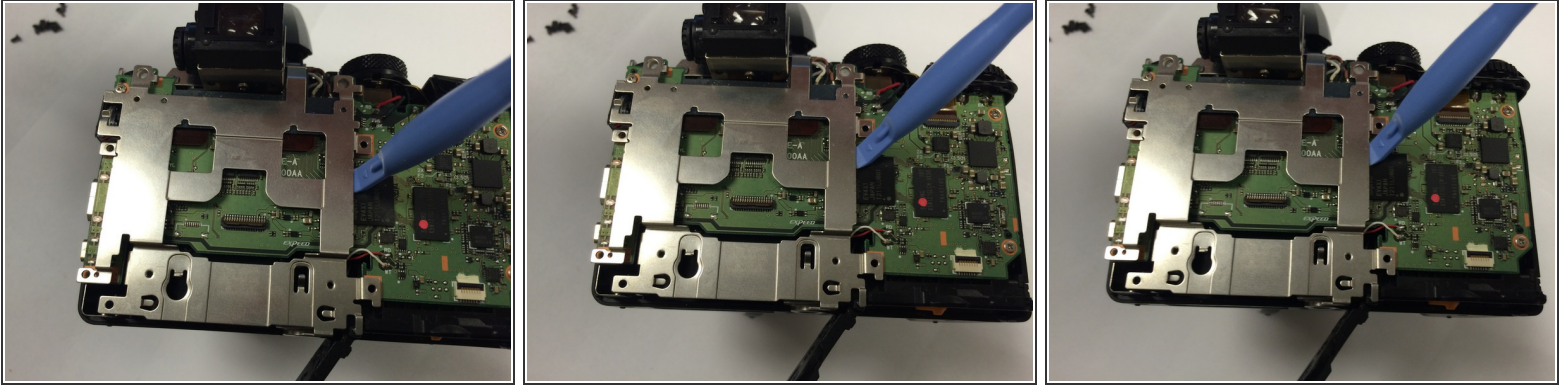

- Use a plastic opening tool to carefully loosen the metal plate.
- Remove the panel to access the camera's motherboard.

Step 12

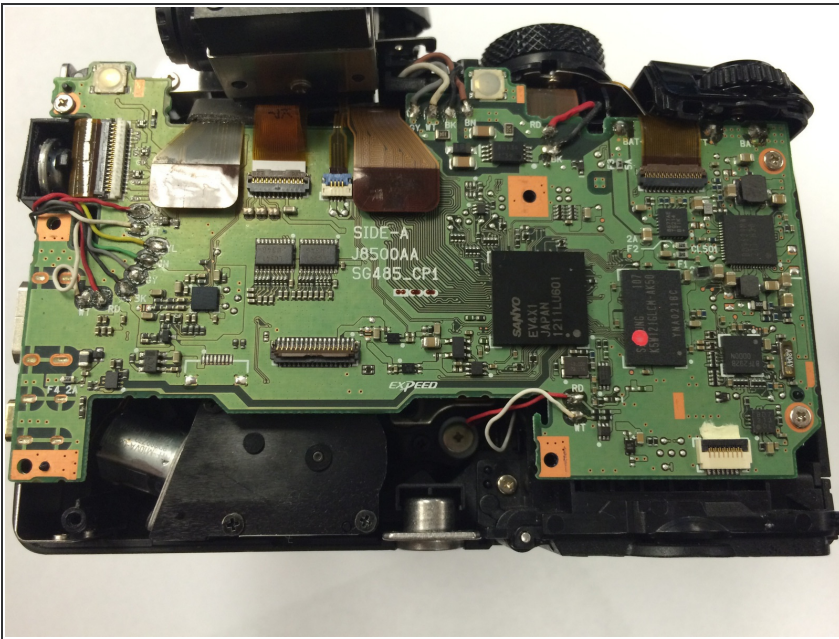

- Now you have access to the camera's motherboard

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-09 07:25:52 PM.